

MOISTURE REGISTER PRODUCTS


A Division of Aqua Measure Instrument Company La Verne, California.

www.moistureregisterproducts.com 1712 Earhart Court, La Verne, CA. 91750

DUST SHIELD INSTALLATION INSTRUCTIONS DWG. 552278

The Moisture Register Products, Dust Shield Part No. 551766 is connected to the NIR Sensor by way of the four socket head screws provided. Use Drawing No. 551929 for mounting dimensions.

- 1. Remove the front cover of the Dust Shield (if not removed already), by removing the eight (8) 6-32 1/2" screws.
- 2. Align the rear of the Dust Shield with the front of the NIR Sensor and screw the four (4) $10-32 \times 5/8$ " socket head screws.
- 3. Replace the front cover; using the eight (8) 6-32 x 1/2" stainless steel screws provided.
 - Four of the screws go into the inner ring and the other four into the outer ring.
- 4. Install constant clean plant air, minimum requirements of 5 PSI, 2-3 CFM dry air. It is recommended that the air be controlled with a regulation valve.
- 5. Note: The air must flow towards the front lens of the NIR Sensor. If the air flows downward, away from the lens you have assembled the Dust Shield backwards. Repeat Steps 1-5.

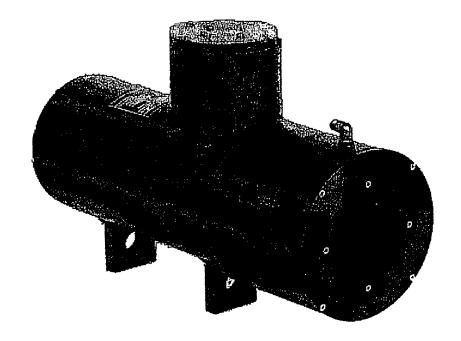

end: 552278.doc March, 1998

